



Foxi Watch

Mobile watch with GPS for kids and adults

User Manual



1. Accessories

- Rechargeable battery.
- USB charger.
- USB cable.
- English manual and warranty information.

Foxi watch and its attached accessories arrived to you after severe laboratory examination and found working. For any clarification, question, problem, error or comment. Don't hesitate to contact us at:

Mobile phone: +972-50-7730018 (from 09:00 to 19:00)

Email: support@foxiwatch.com

Website: <http://www.foxiwatch.com>

The watch has CE and RoHs certifications

Foxi | All Rights Reserved ©

Do not distribute this manual or copy it with any electronic or mechanical way

Table of Content

1. Product Overview	4
1.1 Overall Description.....	4
1.2 Foxi Watch features	4
2. Technical Specifications	4
3. First time Instructions	5
4. Introductions	6
4.1 Key Description.....	6
4.2 Key Information	6
5. Instructions – Step by Step	7
5.1 SIM card installation	7
5.2 Changing speed dial numbers.....	7
5.3 Getting GPS position link.....	9
5.4 Call Back	10
5.5 Monitor	11
5.6 Changing Password	12
5.7 Changing the Time and the Date	13
5.8 Check Battery Status	14
5.9 List of SMS Commands	15
6. SOS Panic Button	16
7. Troubleshooting	17
8. Warranty	18

1. Product Overview

1.1 Overall description

Congratulations! You are now holding Foxi Watch. Mobile watch with smart GPS. Smart Tracking Watch includes the basic functions of calling, GPS tracking, monitoring, and Emergency texting, can also send the location information to mobiles and computers quickly by sending SMS to the watch.

Foxi let you stay close to your relatives that are not capable of using regular mobile phone, and also track them in case of need.

Foxi watch is intended to Kids, Adults, Alzheimer disease patients, blind people and travelers around the world.

All of the controlling options in the watch are handled by sending SMS from a different mobile.

1.2 Foxi watch features

- 1. Incoming and outgoing phone calls.
- 2. Track the watch position anytime.
- 3. Outgoing phone calls to only three numbers that you choose in advance.
- 4. Use Foxi's unique platform to track the watch's location.
- 5. Super simple to operate: no games, music, internet or camera. The watch displays only time and date.
- 6. Auto answer function.
- 7. Monitor one-way call function.
- 8. SOS emergency function.

2. Technical Specifications

Name	Parameters
Product Name	Foxi Smart GPS watch version 1.0
Battery Voltage	3.7V
Charging voltage	DC5V
Size	Appearance of disc diameter 45.84MM / with battery thickness 17.50MM
Operating Temperature	-20C~+70C
Storage Temperature	-40C~+85C
Working frequency	GSM 850/900/1800/1900 MHz
Sensitivity	GSM -108dBm /GPRS CS4 -102dBm
Get watch's position	Foxi's platform, Mobile phone message and a variety of ways

3. First Time Instructions

Before first use, please read the following instructions:

- Charge the watch at least 1.5 hours first charge.
- The watch is NOT waterproof, and you shall not use it in water.
- Do not use any detergent to clean the watch or the charger. Use only dry rag.
- Use the watch only with the battery we supplied for you.
- Do not expose the watch to high temperature, fire, dust, sand or humidity.
- Use the watch only with the power supply we supplied for you.
- Do not try to fix the watch or the power supply by yourself. Any damage to the power supply's wires could cause electrocution.
- In any case of failure please contact our support team.
- Before using the watch, you must purchase SIM card from your favorite mobile carrier that supports 2 GSM network and buy talk and text plan. If you would like to be able to track the watch position even when there is no GPS signal, you should also purchase Data plan.
- Keep your SIM card mobile phone number that you received from the carrier.
- You should use regular SIM card and not Micro or Nano SIM.
- Make sure your SIM card is not password protected.
- Make sure the Caller ID feature is not blocked.
- With Foxi watch you can set up to two numbers for speed dialing. You can choose your parents, siblings, uncles, friends, teachers, and so on. You should choose three numbers to use.
- Foxi watch Default password is: 0000. For your privacy, please consider changing it (page 12).

4. Introduction

4.1 key description

- 1 - Speaker.
- 2 - On/Off button, End call.
- 3 – USB charging plug.
- 4 – Answer button.
- 5 – Microphone.



4.2 Key Information

On standby mode, while the watch is not during a phone call

Long press on button (2) – turn the watch On/Off.

Long press on button (4) – panic button. Send emergency SOS. (Details on page 16)

Short press on button (4) – start dialing the speed dial numbers. (Details on page 7)

During a phone call

Short press on button (2) – Disconnect the call and filter it.

Short press on button (4) – Answer incoming call.

During calling to the speed dial numbers (details on page 7)

Short press on button (2) – dial the next speed dial number (out of 3 you choose).

Long press on button (2) – stops the speed dialing attempt.

5. Instructions – Step by Step

Foxi watch is very easy to operate, yet, there are few things you need to configure.

5.1 SIM card installation

Open the watch back cover clip, insert the SIM card as shown in the picture below, and lock watch back cover. Next to the SIM card holder, there is a small slot. This slot is not useful for you, and relevant only to the manufacturer



Afterwards, turn on the watch. Long press on the upper button on the left side of the watch (button number 2 on the previous page).

5.2 Changing speed dial numbers

In the bottom-left side of the watch (button number 4 on the previous page) you can find the speed dialing push button. This button can dial to three numbers you for your choice.

First, the watch dials to the first number. If there is no answer, the watch continues to the next number and then to the third number.

There are two options for you to set the speed dialing numbers. The faster way is through our website at: <http://www.foxiwatch.com> in the menu you need to click on Support → Instructions → change dialing numbers, and follow the instructions.

Another way is to set the speed dialing numbers manually with those instructions:

You need to send SMS to the watch, with this exact content, including commas and without any spaces or parentheses:

1,(password),(Speed dialing 1),(Speed dialing 2),(Speed dialing 3),

If you did not change it – your initial password is: 0000.

Start here

Example:

Let's say your password is: 1234, and your first dialing number is 444-444-4444, your second number is 555-555-5555, and your third number is: 666-666-6666. You need to send the following text message to the watch:

1,1234,4444444444,5555555555,6666666666,

The watch will reply back "ok!".

If you want to use only one or two speed dialing numbers and not three, you should insert all the fields with the same number.

Example:

Again, say your password is: 1234, and you want to use only one speed dialing: 444-444-4444. You need to send the following SMS to the watch:

1,1234,4444444444,4444444444,4444444444,

Example:

1) Sending SMS with the numbers



2) reply back.



After changing the speed dial numbers, turn the watch off and on.

5.3 Getting GPS position link

Send SMS to the watch with the content: **2.**

First, the watch will try to locate GPS satellites. If GPS is found, the watch will send SMS back to your mobile with link contains Map and Address.

In order to get position link without GPS satellites (meaning, inside buildings and structures), the watch can also receive the estimated position from cellular antenna. To do that, you need to contact your mobile carrier provider and ask for "APN information". After you get this information, send SMS to the watch with this exact content, including commas and without any parentheses:

8,(provider name),(apn name),(user name),(password),

Start here

Example:

In the USA, the APN details for T-mobile carrier are: Provider name is T-mobile, apn name is: internet2.voicestream.com, username and password are "guest". The SMS you need to send to the watch is:

8,T-mobile,internet2.voicestream.com,guest,guest,

** Don't forget to active your data plan.

Example:

1) Sending the SMS



2) Getting the Link back



3) Open the link



The watch was found at the following address:
730 Kelly Road, Wilmington, NC 28409, USA

Attention: The reply back from the watch could take up to 3 minutes.

Important message: GPS link can only be obtain by sending SMS from one of the speed dial numbers.

5.4 Call Back

There are two options for you to contact the person that wears the watch:

First option, you can dial the watch's mobile number the same way you dial to any different mobile number. The watch will not ring, but he will feel vibration.

Second option, you can make the watch call back to you. This feature is used in a situation that the person that wears the watch is unable to press the "answer" key by himself.

Send SMS to the watch with the content: 3.

The watch will call you back, and you can manage a regular phone call.

Example:

Sending the SMS



→→→→ The watch will call you back

Important message: GPS link can only be obtain by sending SMS from one of the speed dial numbers.

5.5 Monitor

Foxi watch has a built-in Monitor feature. This monitor lets you listen to the watch's environment, and the person that wears the watch will not hear you.

In other words, when you active the monitor the watch turns on the microphone and not the speakers.

This feature is used in a situation that you do not want to call the person that wears the watch, but only listen that he is all right.

Send SMS to the watch with the content: 4.

Example:

Sending the SMS



→→→→ The watch will call you back as monitor

Important message: GPS link can only be obtain by sending SMS from one of the speed dial numbers.

5.6 Changing Password

Foxi watch leaves our factory with no information inside and default password: 0000.

We strongly recommend that you change the default password.

If you forgot your password, please contact support.

You need to send SMS to the watch, with this exact content, including commas and without any spaces or parentheses:

5,(Old password),(New password)

Start here

The watch will reply back SMS "ok".

Example:

Let's say your password is: 0000, and you want to change it to 2233. You need to send the following text message to the watch:

5,0000,2233

(The password must be 4 characters long)

Example:

1) Sending the SMS with the numbers



→→→

2) The watch reply back



Important message: GPS link can only be obtain by sending SMS from the first speed dial number.

5.7 Changing the Time and the Date

There are two options for you to set the time and the date. The fastest way is through our website at: <http://www.foxiwatch.com> in the menu you need to click on Support → Instructions → change time and date, and follow the instructions.

Another way is to set the time and the date manually with those instructions: You need to send SMS to the watch, with this exact content, including commas and without any spaces or parentheses:

6,(Day Month Year),(Hour Minute)

(Attention: Foxi watch uses 24 hours watch, not 12.)

Start here

Example:

Let's say that the date now is 22-05-2012 and the time is 19:15. You need to send the following text message to the watch without hyphen or colon:

6,22052012,1915

For the date 22-05-2012 , we took off the hyphen, and it became 22052012. For the time 19:15 , we took off the colon and it became: 1915.

Example:

1) Sending the SMS with the numbers



→→→

2) The watch reply back "ok"



Important message: GPS link can only be obtain by sending SMS from the first speed dial number.

5.8 Check Battery Status

On the watch's display you can see the battery status icon. But there is also an option for you to check the battery status by sending SMS to the watch.

Send SMS to the watch with the content: 7.

The watch will reply one of the following options:

- The watch replied "0" means there is 0%-20% of battery remaining.
- The watch replied "1" means there is 21%-100% of battery remaining.

If the watch did not reply back, it means that the watch is turned off or out of service.

Example:

1) Sending the SMS with number "7"



→→→

2) The watch reply back 0 or 1



Important message: GPS link can only be obtain by sending SMS from one of the speed dial numbers.

5.9 List of SMS Commands

- 1) Changing speed dial numbers: 1,password,number 1,number 2,number 3,
- 2) GPS position: 2
- 3) Call back: 3
- 4) Monitor: 4
- 5) Changing password: 5,old password,new password
- 6) Change date and time: 6,day month year, hour minute
- 7) Battery status: 7

For more detailed information of all the shortcuts, please visit our website at: <http://www.foxiwatch.com> and click on support → instructions

6. SOS panic button

On Foxi watch there is a panic button (SOS). Pressing that button will send an SMS with the location of the watch, to all the speed dial numbers.

To active the SOS button, you need long press (about 3 seconds) on the "answer" button. The answer button is the lower button at the left side of the watch:



SOS button can be used for kids, adults and patients that feel in danger and want to send SMS with their location to all the speed dial numbers.

After pressing the SOS button, you will feel a vibration in the watch. This is for you to know that the watch is in SOS mode, and starting to send an emergency SMS.

7. Troubleshooting

Question	Solution
Unable to make calls	Please check that the SIM card is placed correctly and you have SMS and talk plan.
I sent an SMS, but did not get any reply from the watch	Please make sure that you wrote the right SMS syntax as shown in the instruction, and the SMS was sent from one of the speed dial numbers.
I forgot the watch's password	Contact support team.
Does the watch works on any mobile cellular carrier?	No. the watch works only on 2 GSM / 2.5 GSM mobile carriers. Every country in the world has at least two carriers that supports 2 GSM network. except Japan and south Korea
Does the watch have a warranty?	The warranty is included in this manual.
How long does the battery last?	30-45 minutes of charging, can last up to 4-5 days of reasonable use. The battery capacity is 450 mAh

For more detailed information of all F&Q and troubleshooting, please visit our website at: <http://www.foxiwatch.com> and click on support → Q&A

8. Warranty

Dear customer,

We want to thank you for choosing our product: Foxi watch, and hope you will produce the best of it.

Foxi watch warranty is valid for 1 year from the day you bought it. Including the battery and the charger

Warranty Terms

- 1) During the warranty time, Foxi undertakes to fix any fault or error that will be found on the watch. free of charge.
- 2) Foxi undertakes to use only real and genuine replacement parts.
- 3) Foxi undertakes to fix the watch within 10 days from receiving the watch. Saturdays and holidays will not be counted.
- 4) After returning the watch from the reparation, the watch warranty will be covered for the rest of the warranty time and will not be extended due to repairing time.
- 5) In case of need to replace the entire watch, the broken watch will be the property of the manufacturer.
- 6) In case of need to replace the entire watch, the customer knows that all the information inside the watch will be deleted and set to factory default.
- 7) Foxi undertakes to give the customer full detail of the fixing process and replacement parts being used.
- 8) Fixing and repairing the watch will be in Foxi's offices. The expenses of the delivery will be paid by the customer.

9) Foxi can refuse to provide a warranty in case of deliberate harm to the watch or if found any of the following cases:

- Depravation caused by using the watch for any use it was not meant to be.
- Damage caused by fragile, accident, hit, stroke, fall down, pressure on the watch, destruction, negligence, carelessness, sand, dusk or fluid penetration.
- Force Majeure or any similar event caused after the watch arrived to the customer.
- Any attempt to fix the watch by a non-certified on our behalf.
- Any occasion of lack of GPS or cellular coverage or by any wireless disruption.

Dear customer, in order to improve the service provided to you, please keep this manual safe. This warranty is valid only when the signature of the seller is at the bottom of this paper.

Date of Purchase: _____

Order Number: _____

Seller Signature: _____

Foxi Watch

Your safe protecting watch



© All rights reserved • Headquarters: Kfar Yona, Israel
• Mobile phone: 972-50-7730018 • Fax: 972-77-4702782 •
Email: support@foxiwatch.com • Website: <http://www.foxiwatch.com>